

OWNER'S MANUAL

Cam GoHeat™ Electric Heater

For use with models below:

| | |
|-------------|-----------------------|
| CGH2W230VUK | Cam GoHeat 200w230VUK |
| CGH1W230VUK | Cam GoHeat 100w230VUK |
| CGH2W230VEU | Cam GoHeat 200w230VEU |
| CGH1W230VEU | Cam GoHeat 100w230VEU |
| CGH1W12VCAR | Cam GoHeat 100w12VCAR |

Important: Please read all instructions prior to use and save for future reference.

The heater is designed to keep hot food at safe temperature. Do not use to heat food. Any use other than that described in this manual will void the warranty.

| UNIT TYPE | CONNECTION |
|-------------------------------------|---|
| GN 1/1 230V 200W GN 1/1 230V 100W | 220 volt - 240 volt alternation current |
| GN 1/1 12V 100W | 12 - 14,2 volt direct current (car) |

Installation and operational use of the heating system

Open the Insulated Carrier (illustration no. 2) and lay the heater (illustration no. 1) flat on the bottom of the Insulated Carrier. It is not necessary to preheat the carrier. Guide the power cord up the side of the carrier and through the notch at the top of the end of the carrier. (See illustration no. 4) Front loaders have notch on the right side of the door.

Fill the Insulated Carrier with GN pans or take away containers and close.

Plug into the appropriate power supply, outlet or cigarette lighter (220 volt - 240 volt, or for car 12 volt - 14,2 volt cigarette lighter socket or socket terminal board). The temperature control of the heating system is factory set to automatically reach and maintain a temperature of 75°C

Caution! The entire surface area of the heater is hot when plugged in.

Warning!

- Follow all warnings marked on product.
- Connect unit to properly grounded power source.
- Use only type of power supply (voltage, phase, frequency) indicated on the heater unit label.
- Do not use if cord is damaged or frayed. The power cord cannot be replaced.
- Do not put objects with a temperature higher than 120°C onto the heater.
- Do not cover any part of the heater with any soft materials whatsoever, e.g. rubber, foam, cloths or similar.
- Do not use heater if damaged in any way.
- Do not place on soft, flexible surface.
- Do not use in wet or damp conditions.

Cleaning and Service

- Unplug prior to cleaning or service.
- **Warning!** Do not submerge in water and do not clean the heater under running water and/or in a dishwasher.
- Use a damp cloth and solvent-free cleanser to clean the heater.
- Only a Cambro Authorized Service Agent or qualified foodservice equipment technician should service the product.
- Do not dispose in household waste. Dispose at authorized electronics recycling center.



Heater and one connecting plug included.
All other items sold separately.

1. Heater Unit
2. GoBox Insulated Carrier
3. Food Pan
4. Notch in GoBox carrier for heater cord
5. Lead for 12 volt cigarette lighter socket
6. Connecting plug 230 volt for socket
7. 10 socket terminal board 12 volt
8. Connecting lead for car 12 volt battery



CAMBRO U.S.A.
TEL: 1(714) 848-1555
FAX: 1(714) 230-4375
international@cambro.com

CAMBRO EUROPEAN LOGISTICS
TEL: (49) 7022 90 100 0
FAX: (49) 7022 90 100 19
cambroeurope@cambro.com

CAMBRO UK
TEL: 0800 587 0057 Toll Free
FAX: 0845 280 3411
cambrouk@cambro.com

CAMBRO IRELAND
TEL: 1800 509 046 Toll Free
FAX: 01 633 55 76
cambroireland@cambro.com

© Copyright Cambro Manufacturing Company. Printed in the U.S.A.

LITX18GOHEATMAN